



1-800-387-4800
www.espar.com

AIRTRONIC OPERATION INSTRUCTIONS

OPERATION NOTES

Before use, check the following:

- **Make sure your vehicle is in an open and well-ventilated area.**
- **You also don't want to be near anyone fueling any kind of fuel tanks.**

AIRTRONIC heater can be operated by a mini-controller, a room thermostat or an optional 7 Day Timer. (Please look up the instructions for the 7 Day timer).

To start the Espar Airtronic heater, do the following:

- Pushing the "heater on" button on the mini controller (red light illuminates) or the rocker type on/off switch on the thermostat to the on position.
- Turn the round temperature range selector knob clockwise to raise the temperature and counterclockwise when you want less heat.
- After a five second systems check you'll hear the blower motor start up gradually.
- In about a minute the fuel pump starts and delivers fuel to the combustion chamber in pulses.
- If the heater fails to ignite the first time it will automatically attempt a second start.
- If heater fails to ignite after the second start, you must turn heater off and on again to restart the cycle.
- To just have air flowing out the heater vent (not heated air), press the "Ventilate Button".

To turn off the Espar Airtronic heater do the following:


- You shut your Espar heater down by pushing the off button on the mini-controller or by pushing the rocker type on-off switch on the thermostat switch to the off position.
- The combustion air blower continues to run for a four minute cool down cycle then switches off completely.
- Should the heater fail to start or shut down unexpectedly look for obvious obstructions, consult your troubleshooting guide in the owners manual or call your nearest Espar dealer.

For preventative maintenance, do the following:

- Run your heater every month throughout the year for at least fifteen minutes.
- Prior to the start of the heating season, have the filter screens checked and/or changed at the inlet to the dosing pump, and at the glow pin.

ESPAR HEATER CONTROL

Mini-Controller

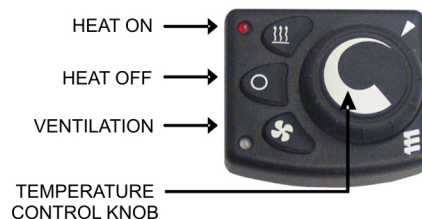

SERVICE

**For more information
on Espar Airtronic heater
contact Espar @
1-800-387-4800**